

EUROCARD HOLDER

SKT 32 C

Screw terminals

32-pole C (EN 60603)



Row a, c

The D2 size is for a card without a front plate.

To insert the card first press down the 2 yellow buttons. Then slide the Eurocard into the guide slots pushing until fully engaged. The card is now locked into position. It can be removed by pressing down on the 2 yellow buttons.

[Link to Product](#)

Illustration

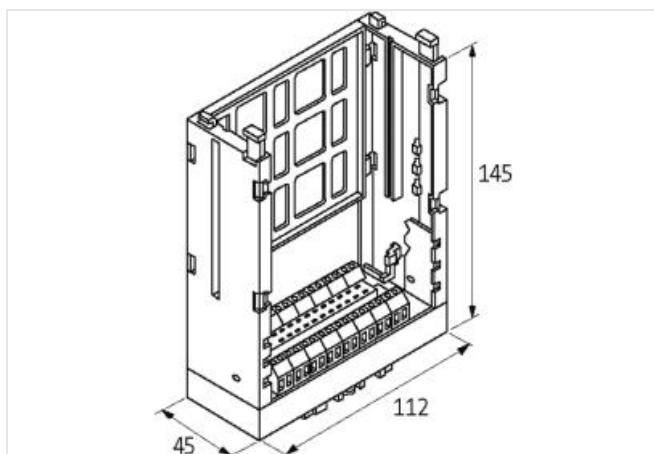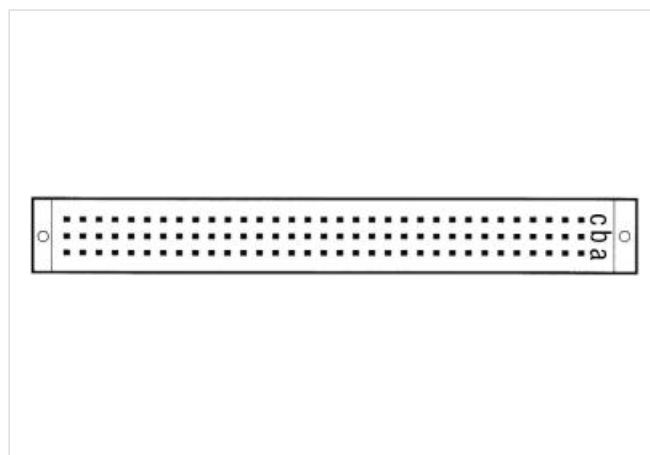

Product may differ from Image



取引条件

ECLASS-6.0	27260710
ECLASS-6.1	27260704
ECLASS-7.0	27440402
ECLASS-8.0	27440402

ECLASS-9.0	27460201
ECLASS-10.1	27440402
ECLASS-11.1	27460201
ECLASS-12.0	27460201
ETIM-5.0	EC002780
GTIN	4048879041980
HSコード	85366990
Packaging unit	1
Electrical data Supply	
Operating voltage AC	250 V
Operating current max.	2 A
Installation	
Connection cross-section solid max.	4 mm²
Installation Pin assignment	
No. of poles	32
Device protection Electrical	
Overvoltage category (EN 60664-1)	I
Device protection Media	
Flame resistance	flame retardant
Mechanical data	
Type of socket connector	C (EN 60603)
Mechanical data Material data	
Material housing	Plastic
Mechanical data Mounting data	
Mounting method	screwed, geschnappt
Suitable for mounting type	horizontal, vertical, mounting rail, (EN 60715)
Height	112 mm
Width	45 mm
Depth	145 mm